

ComforTable

-by Breis

PACS Workstation Tables



**Well being and Flexibility for the Radiologist
Quality and Efficiency for the Service**

Standard Features

Motorized height adjustment from 700 to 1200 mm

Power and network inlets at floor level eliminates dangerous and inconvenient cables

2 power inlets (1 for UPS)

10 power outlets - for PC, monitors, other accessories etc, incl 2 UPS outputs

Separate fixed-level monitor shelf

Integrated cable basket for tidy cabling

Padded arm rest

Integrated keypad

Choice of desktop width - 1420 / 1660 / 1960 mm

Other sizes available on request.

Breis & Co design and build ergonomic PACS workstations for diagnostic softcopy reading. The fully adjustable *ComforTable* enables radiologists to work in conditions of enhanced utility and comfort. Automatic control of ambient and background illumination ensures constant conditions as stipulated by DICOM Part 14.



Low level



Raised level

***ComforTable* is designed and built to Swedish standards of ergonomics and craftsmanship**

Options



Sound absorbing background screen covered in microfibre for privacy. Lower screen/modesty screen also available.

Upward and downward lighting with dimmer.



Background screen and illumination. Also includes automatic control of the background and ambient light levels for a constant working environment.



Motorized table tilt (0-10 degrees). When ordering table tilt, a monitor stand should also be ordered.



Monitor stand for 3, 4 or 5 monitors, with electrical up/down adjustment. Manual height adjustment also available.



Adjustable keyboard tray.

Also shown: Padded armrest. (Standard feature)



PC Holder with sound absorbing and theft protected cabinet. (Mounted on left and/or right side)




Wider table for up to 5 monitors.



Foot-rest with two positions. Can be used both in seated and standing position.



Additional shelves, raised or level with the main desk. (Left or right)

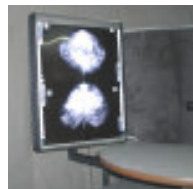

Light box mounted on left or right side. Can be adjusted in height, rotated and turned in/out.



USB hub for easy connection of accessories like speech mike and bar code readers.



Built-in UPS unit. Intended only for safe shut down of the PC.



10 power outlets for monitors, PC and other accessories. (Standard feature)



Built-in control panel

Specifications

- **Maximum power consumption** 200 W
- **Mains** 230/117VAC, 50/60Hz
- **Maximum total load** 180 kg
- **Table surface height** 700 - 1200 mm
- **Total height (inc. lighting)** 1500 - 2000 mm
- **Weight (without PC/monitors)** 140 kg
- **Maximum tilt** 10°
- **Maximum total monitor weight with electrical lift** 45 kg
- **Maximum total monitor weight with no stand or manual monitor stand** 60 kg
- **Table depth (minimum door opening)**
 - Assembled** 880 mm
 - Partly dis-assembled** 750 mm

